


# DUKABEL

## USER MANUAL

DUKABEL USB Wired Earbuds  
Model: DUSBEAR-180B

DUKABEL USB wired earbuds, instantly connect to your PC/PS4/PS5/Laptop etc., providing plug-and-play simplicity and reliability every time with USB 2.0 plug for music and Video calls.


Support Windows 10/8.1/8/7Vista/X-P, Mac OS X, Linux, Google Chromebook etc.,.

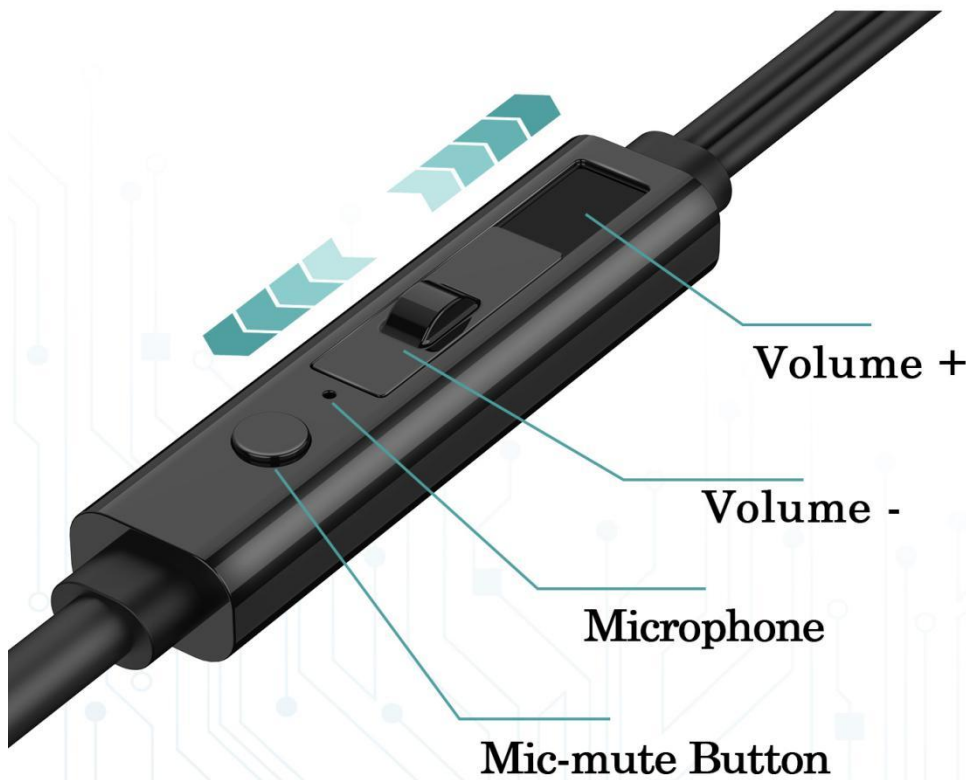

Slide up and down +/- to control the volume.

Press & hold the Mic-mute button to mute the microphone.

Release the mic-mute button to activate the microphone.

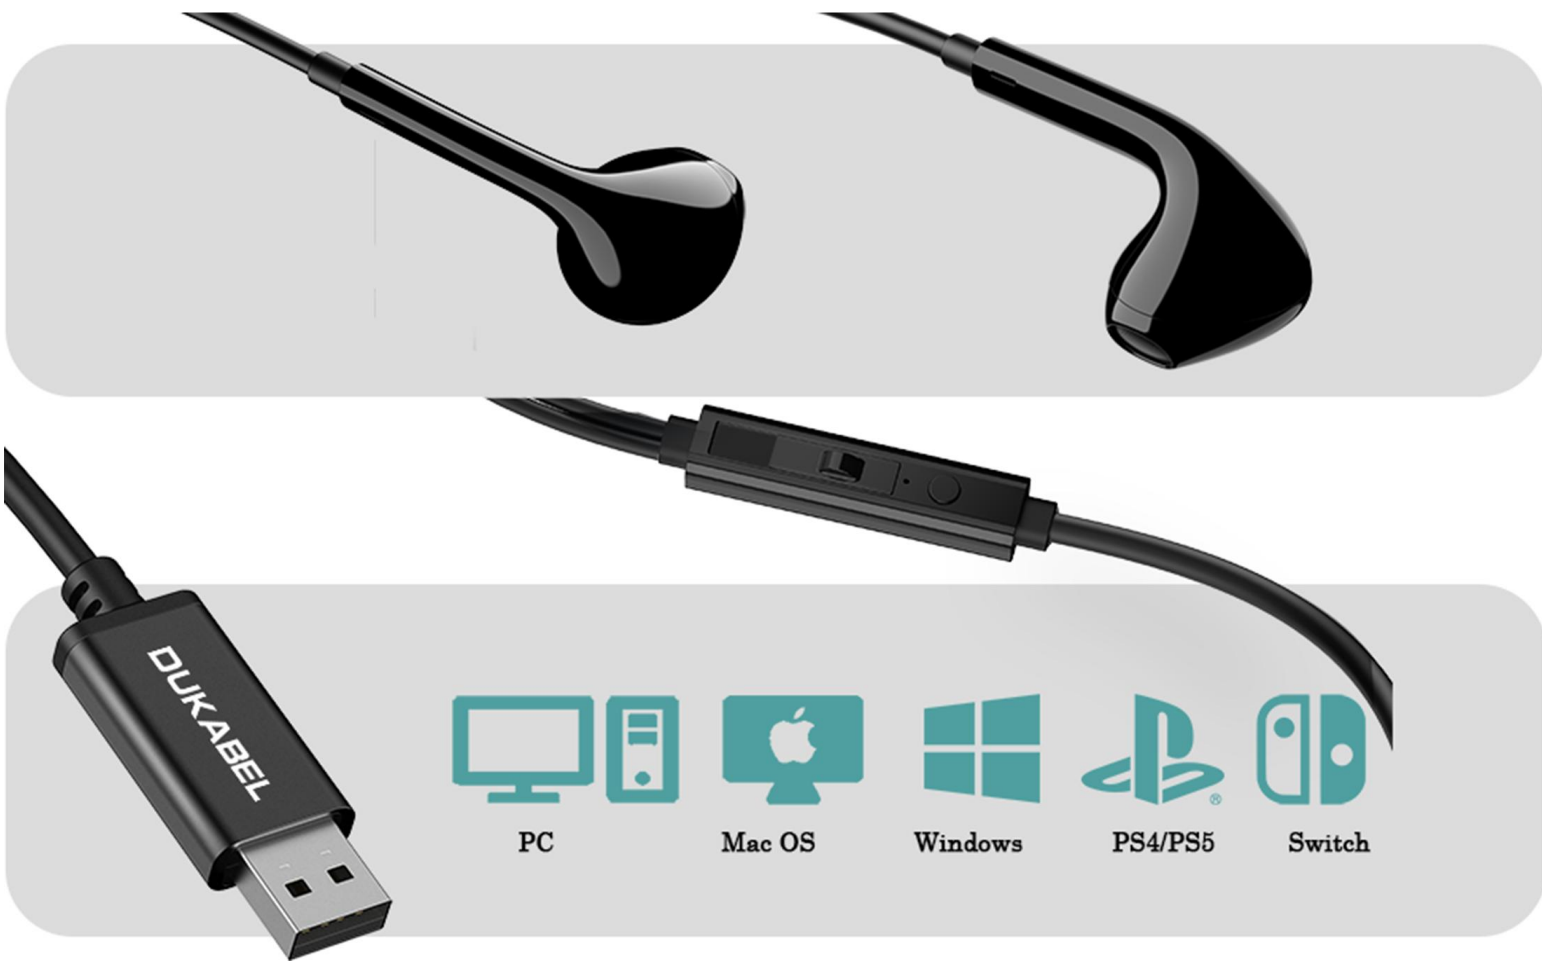

### Q: How to set the usb headphones to PS4 or PS5?

Select Sound and Screen > Audio Output Settings > Output to Headphones.  
The default setting is Chat Audio

### Q: How to connect the usb headset on Windows 10?

1. Plug the USB plug into the USB port
2. Double check the headset mute button.( If the headset has a mute button.)
3. Open Sound Settings.(Right Click the speaker icon > Select sound settings)
4. Set the USB headset as the output device.
5. Set the USB headset as the input device.

### Note:

1. To protect your ears, turn down the volume on your device manually after connecting the headset, and then wear it.
2. When connect with Nintendo Switch, the microphone works depends on the game you played.

# Product Specifications

Connection	USB Type A
Microphone	2.2 k $\Omega$ $\pm$ 10 %
Driver Unit	Ø14,8 mm
Microphone Sensitivity	42 dB $\pm$ 2 dB
Sound Level	95 $\pm$ 3 dB/1 kHz/1 mW
Input Rate	2mW
Sample Rate	48KHz
Frequency	20Hz~20KHz
Impedance	32 $\Omega$ $\pm$ 15 %
Cable Length	1.8 Meter

## Microphone Setting Guide:

Q: I cannot get the microphone work as normal on my device,how to fix it?

A: Please access to your control panel,select System settings or application settings, then you can increase the volume of your mic.

Eg: For Win 10,Select "Start",then select Settings>System>Sound,  
In "Input",select the microphone "USB Audio"under "Choose your input device",  
then click "Device Properties"and change your volume to the perfect level.

## Warm Tips

- 1.DO NOT work for Car, TV, PS3, Truck, XBOX, DVD Player, CD Player etc.
- 2.When connect with Nintendo Switch, the microphone works depends on the game you played.
- 3.DO NOT support Play & Pause function.
- 4.For accurate volume, please control the volume+- on your devices.

## Warranty

1. The product is backed up with 1 Year warranty,and if you want to extend it to 18months, please contact us via [support@dukabel.com](mailto:support@dukabel.com)
2. Reach us via [support@dukabel.com](mailto:support@dukabel.com) to join our Super User Program to test new released products for free
3. Contact us via [support@dukabel.com](mailto:support@dukabel.com) for any technical support or quality issues.

## 7/24 Support Team



Email address: [support@dukabel.com](mailto:support@dukabel.com)



Official Website: [www.dukabel.com](http://www.dukabel.com)



Warranty Register: [www.dukabel.com/warranty](http://www.dukabel.com/warranty)



Power User: [www.dukabel.com/giveaway](http://www.dukabel.com/giveaway)



User Manual: [www.dukabel.com/download](http://www.dukabel.com/download)